Bistro Contact Grill

Instruction manual

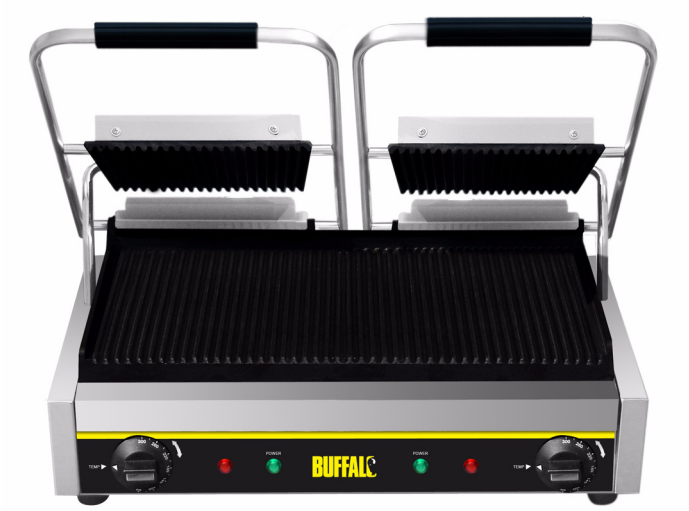

Model

CD474-A / DM902-A / DM903-A

AUS

Safety Tips

- Position on a flat, stable surface
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove and components or service panels on this product
- Consult Local and National standards to comply with the following:
  - Health and safety at work legislation
  - BS EN Codes of practice
  - Fire Precautions
  - IEE wiring regulations
  - Building regulations
- DO NOT use jet/pressure washers to clean the appliance
- DO NOT use the appliance outside
- DO NOT allow oil or fat to come into contact with the plastic components. Clean immediately if contact occurs
- DO NOT store products on top of the appliance
- Always carry, store and handle the appliance in a vertical position and move by holding the base of the appliance
- Do not carry when hot
- Always switch off and disconnect the power supply to the unit before cleaning
- Keep all packaging away from children. Dispose of the packaging in accordance with the regulations of local authorities
- If the power cord is damaged, it must be replaced by a BUFFALO agent or a recommended qualified technician in order to avoid a hazard
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Product Description

Bistro Contact Grill

Pack Contents

Contact Grill Scraper Allen Key

Should you find any damage as a result of transit, please contact your Buffalo dealer immediately.

Installation

Remove your Buffalo Bistro Contact Grill from its packaging and be certain that all protective plastics and residues are thoroughly cleaned from its surface.

Locate on a firm level surface; use the adjustable feet to level the Grill.

Buffalo recommended that you allow no less than 100mm ventilated gap around the perimeter of this unit.

Ensure that the stainless steel waste tray is correctly positioned.

Connect to the electricity supply using the plug, the Grill is now ready to turn on and operate.

Preparing the cooking surface - make sure the cooking surface is clean, turn the unit on and apply a generous amount of oil to the plates. Using the thermostat control, set the Grill to 110˚C, when the Grill has reached temperature, switch off and carefully wipe any excess oil from the plates.

Operation

The Contact Grill should be turned on at least 5 minutes before use

To get efficient use out of this unit while in intermittent use, it is recommended that the Grill plates remain closed and the thermostat turned down, when not cooking. This will assist in reducing power consumption and also allow for quicker heat response when needed.

Buffalo recommends that the cooking surface is lightly greased, before each use.

A temperature setting of between 200°C and 220°C will be sufficient for general cooking. This may vary for particular food types, individual needs, or experience.

Simply place the food products on the bottom grilling surface and lower the top plate down, and cook to your needs.

Use the Allen key supplied to adjust the tension of the top plate. Turn clockwise to tighten, anti-clockwise to loosen.

Cleaning, Care & Maintenance

Before starting to clean the Grill, disconnect from the electricity supply by removing the plug from the socket.

Clean the cooking surface regularly, we recommend it is cleaned after every use session.

When the cooking surfaces are still warm, wash with warm soapy water and then rinse thoroughly with clean water. This will help to stop food sticking to the plates.

Do not use metal scrapers or scourers, as these may damage the cooking surfaces.

Remove the fat drip tray and wash in warm soapy water.

Other surfaces can be wiped over with a damp cloth to remove all food residues.

Do not immerse the Contact Grill in water or use water sprays to clean it.

If grease is permitted to accumulate, it will begin to carbonise into a hard substance that is extremely difficult to remove. To prevent this, follow the cleaning steps below:

1) Always turn OFF the appliance and disconnect from the power supply before cleaning
2) Allow the appliance to cool before cleaning, but for best results clean the plates when they are still slightly warm
3) Use warm, soapy water and a damp cloth to clean the exterior of the appliance
4) Take care when using scrapers to remove cooking residues as they can damage the cooking surface
5) Dry thoroughly after cleaning
6) A Buffalo dealer or qualified technician should carry out repairs if required

AUS

Scraping

After each use, scrape the appliance with a scraper/grill stone/copper brush or flexible spatula to remove excess fat and food. A waste tray is provided for the scrapings if necessary

If there is an accumulation of burned fat or food, the cooking surface should be thoroughly scoured and re-seasoned

NOTE: IT IS VITAL THAT THE COOKING SURFACE IS RE-SEASONED AFTER SCOURING

WARNING: DO NOT USE STEEL WOOL AS IT MAY LEAVE SHARDS THAT COULD CONTAMINATE FOOD

Waste tray

This appliance feature a waste tray to collect any liquid or fats that run off during cooking

At least once a day, remove and empty the waste tray before washing with warm, soapy water. Do not allow the tray to overfill, or excess grease will run out of the overflow hole at the front of the tray

WARNING: DO NOT REMOVE THE TRAY DURING OR IMMEDIATELY AFTER USE AS THE CONTENTS WILL BE HOT

Trouble Shooting

If your BUFFALO product develops a fault, please check the following table before making a call to your BUFFALO agent.

Fault	Probable Cause	Action Required
The product is not working	The product is not switched on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call your BUFFALOagent or qualified electrical technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply problem	Check power supply
	Internal wiring fault	Call your BUFFALO agent or qualified electrical technician
Product does reach set temperature	Faulty thermostat	Call your BUFFALO agent or qualified electrical technician
	Faulty element	Call your BUFFALO agent or qualified electrical technician
The light only comes on when the power is going to the element so the product can be hot when this light goes out.	Bulb has failed	Call your BUFFALO agent or qualified electrical technician

Fault	Probable Cause	Action Required
Power indicator light comes on but product does not heat up	Faulty element	Call your BUFFALO agent or qualified electrical technician
	Faulty thermostat	Call your BUFFALO agent or qualified electrical technician
	Thermostat set incorrectly	Check thermostat setting
Product slow to heat up	Cooking surface not cleaned	Clean cooking surface as instructions
	Faulty element	Call your BUFFALO agent or qualified electrical technician

Technical Specifications

Code	Voltage	Power Watts	Current	Plate Type		Dimensions	Weight Kgs
				Top	Bottom	h x w x d (mm)	
CD474-A	220-240V 50Hz	1500W	6.5A	Rib	Rib	210 x 290 x 320	14.5kgs
DM902-A	220-240V 50Hz	2900W	12.6A	Rib	Rib	210 x 540 x 320	27.0kgs
DM903-A	220-240V 50Hz	2200W	9.5A	Rib	Rib	210 x 380 x 320	19.0kgs

Electrical Wiring

The plug is to be connected to a suitable mains socket

The appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit

If in doubt, consult a qualified electrician

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

BUFFALO parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

BUFFALO products have been approved to carry the following symbol:

All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of BUFFALO.

Every effort is made to ensure all details are correct at the time of going to press, however, BUFFALO reserve the right to change specifications without notice.

DECLARATION OF CONFORMITY

Equipment Type	**Bistro Grill**
Model	**CD474-A DM902-A DM903-A**
Legislation	**C-Tick** **AS/NZ 3820 Essential Safety Requirements for Low Voltage Electrical Equipment**
Standards	**EN 55014-1:2006** **EN 55014-2:1997+A1** **EN 61000-3-2:2006** **EN 61000-3-3:1995+A1+A2** **EN 60335-1:2002+A11+A1+A12+A2+A13+A14** **EN 60335-2-38:2002+A1 : 2008** **Annex ZZ of AS/NZS60335.1:2002++A1+A2+A3** **EN 62233:2008**
Producer Name	**Buffalo**
Producer Address	**Unit 2, 34-38 Anzac Ave,** **Smeaton Grange,** **NSW 2567**

I, the undersigned, hereby declare that the equipment specified above conforms to the above Legislation and Standard(s).

Date	**23/03/11**
Signature	
Full Name	**Richard Cromwell**
Position	**Marketing Director**

CD474-A_DM902-A_DM903-A_UK_A5_V1